

kitsch-bent > quint


rev. 1.0

6/6/2012


[kitsch-bent.com](http://kitsch-bent.com)

# this is how to wire the 3.5mm jack

the black plastic is stamped '1' and '2', for reference

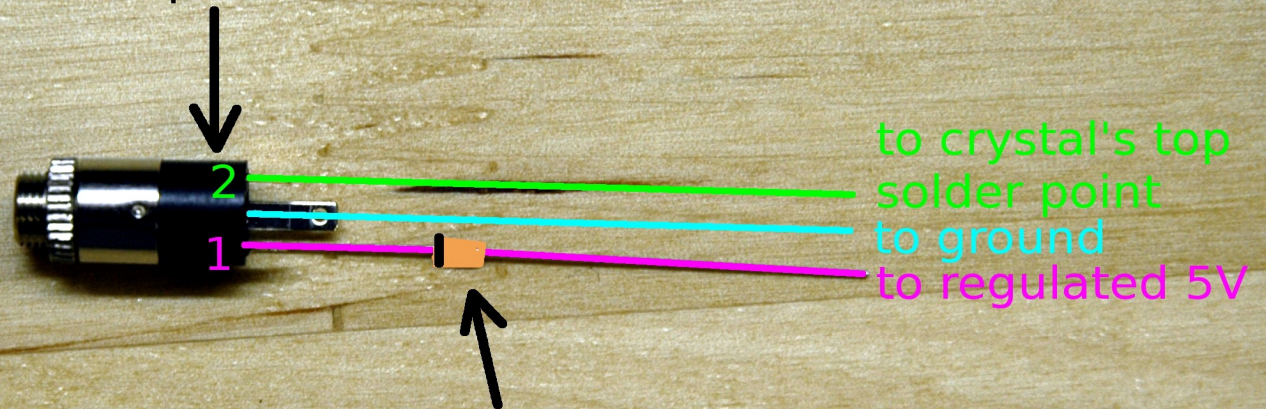

wire the diode oriented this way

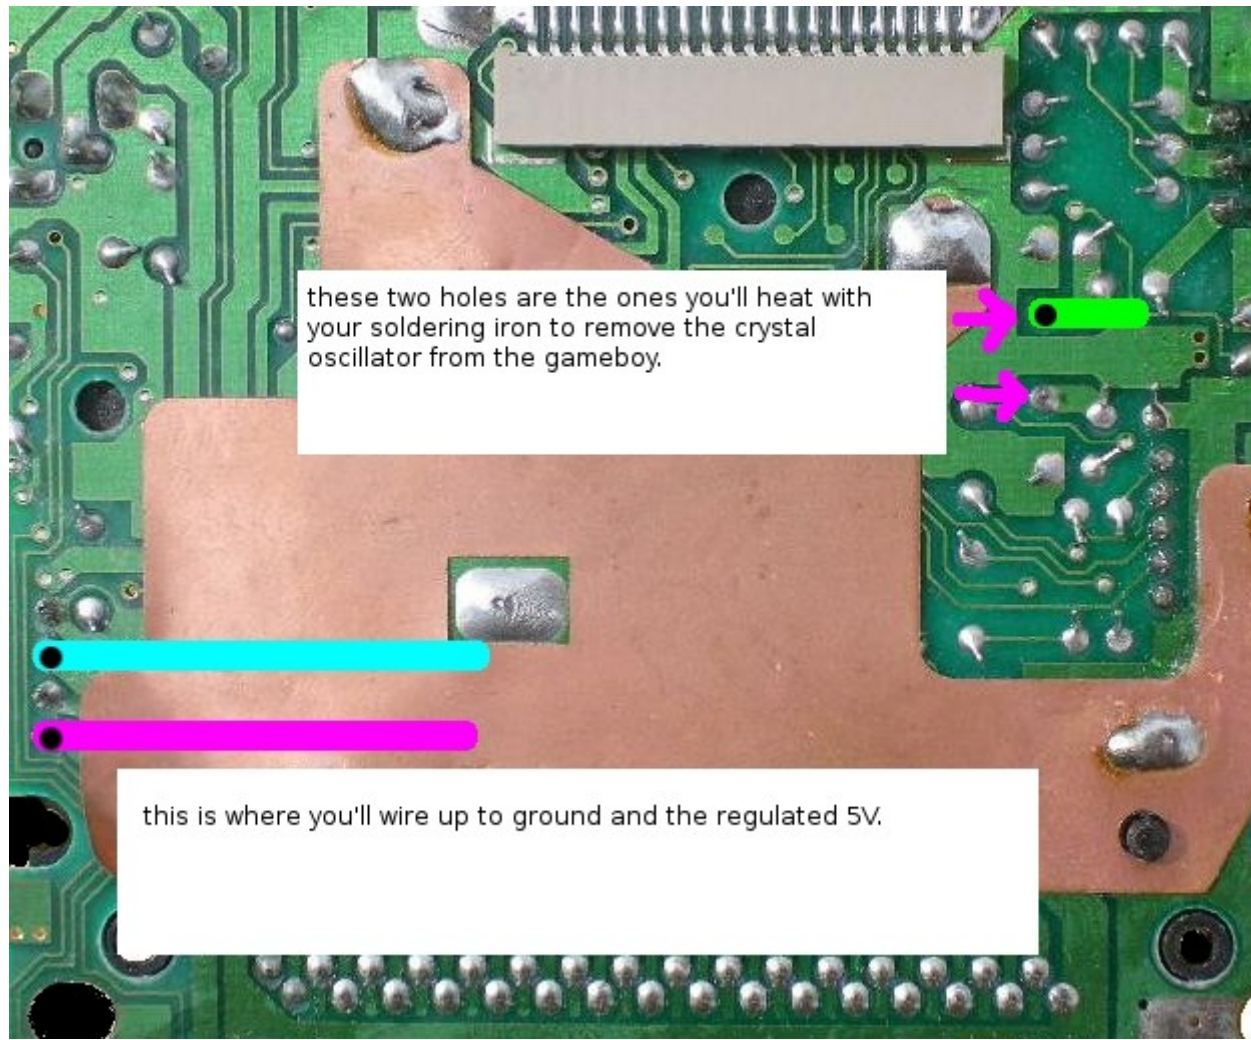

these two holes are the ones you'll heat with your soldering iron to remove the crystal oscillator from the gameboy.

this is where you'll wire up to ground and the regulated 5V.

congratulations! thats it!

just install the jack where you wish on your case.  
it's as simple as a prosound mod. the circuitry is  
housed entirely in the quint itself, minus that  
single diode.

